


## Small Venus Specs

### Venus-123

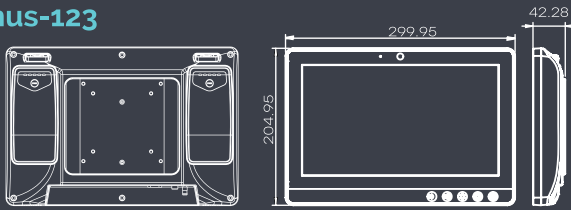

#### CPU

Intel® 6th Generation  
Core i5-6300U  
3.0 GHz Dual Core

#### DISPLAY

11.6" 250-nit WXGA LCD

#### IO

USB 2.0 x 2, USB 3.0 x 2  
Isolated RS-232 x 1  
Isolated Gigabit LAN x 2  
HDMI x 1


#### Battery

4545 mAh x2

#### System Memory

Non-ECC DDR4 SO-DIMM  
up to 16GB

### Venus-153

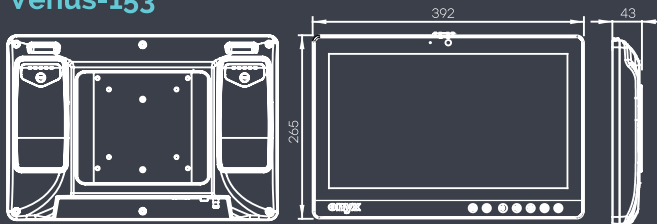

#### CPU

Intel® 6th Generation  
Core i5-6300U  
3.0 GHz Dual Core

#### DISPLAY

15.6" 250-nit WXGA LCD

#### IO

USB 2.0 x 2, USB 3.0 x 2  
Isolated RS-232 x 1  
Isolated Gigabit LAN x 2  
HDMI x 1


#### Battery

4545 mAh x2

#### System Memory

Non-ECC DDR4 SO-DIMM  
up to 16GB

### Venus-173

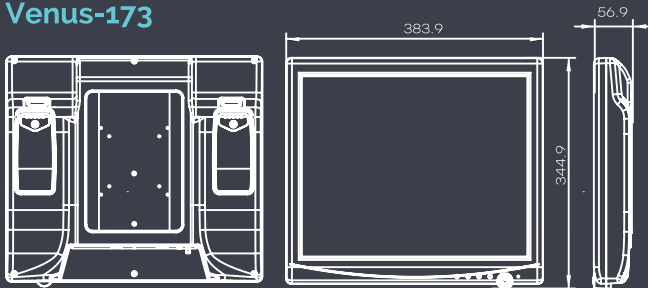

#### CPU

Intel® 6th Generation  
Core i5-6300U  
3.0 GHz Dual Core

#### DISPLAY

17" 250-nit WXGA LCD

#### IO

USB 2.0 x 2, USB 3.0 x 2  
Isolated RS-232 x 1  
Isolated Gigabit LAN x 2  
HDMI x 1

#### Battery

4545 mAh x2

#### System Memory

Non-ECC DDR4 SO-DIMM  
up to 16GB

## Contact Information

### Onyx Healthcare Inc.

2F., No.135, Lane 235, Pao Chiao Rd.,  
Xindian Dist., New Taipei City 231,  
Taiwan (R.O.C.)

Tel: 886-2-8919-2188

Fax: 886-2-8919-1699

E-mail: sales@onyx-healthcare.com

### Onyx Healthcare EUROPE B.V.

Primulalaan 42, 5582 GL, Waalre,  
The Netherlands

Tel: +31-(0)499-745600

E-mail: eusales@onyx-healthcare.com

### Onyx Healthcare USA, Inc.

324 W. Blueridge Ave.,  
Orange, CA 92865

Tel: +1-714-792-0774

Fax: +1-714-792-0481

E-mail: usasales@onyx-healthcare.com



**onyx**  
Smart Healthcare an ASULUS ASSOC. CO.

www.onyx-healthcare.com

# mini Venus

Small Mobile Computer

12"15"17"



3 Second  
Swap & Go

4 4Kv  
Isolated I/O

5 ★★★★★  
Star Safety

# 3 Sec Swap & Go

## Dual Hot Swappable Battery Non-Stop Care

Traditional medical cart computers can be frustrating to work with because of their limited uptime due to battery capacity. Users must always worry if the power level is enough to complete their tasks, adding unnecessary stress to their work and creating situations where they are more likely to make mistakes.

The Venus exclusive battery hot-swap system allows users to replace a battery in just three seconds without waiting for the battery to charge and without shutting down the computer giving users 100% full power immediately so they don't need to interrupt their work.



# 4 kv Isolated I/O

## Electrical Shield to Protect Your Device

Venus provides 4kv isolated ports that act like an electrical firewall between the Venus and connected devices. The protected ports avoid the potential for electrical shock between the Venus and attached device that can damage the system and harm users. This kind of electrical isolation is ideal for medical environments where system stability and user safety is an absolute necessity.



# 5 Star Safety



As a leading medical equipment manufacturer, safety is always our highest priority. We are not satisfied with our products simply meeting standard safety requirements. This is why we have applied the industry's most demanding safety regulations (ul-60601-1, IEC 60601-1) to the Venus, because at Onyx, safety is not an option, it's our primary concern.



Baby Venus embedded version provide 10 year longevity

